



Smart Compact Payment Box Bedienungsanleitung
Smart Compact Payment Box Instructions for use
Boîtier de paiement compact intelligent Mode d'emploi
Box di pagamento compatto inteligente Istruzioni per l'uso
Intelligente compacte betaalbox Gebruiksaanwijzing
Caja de pago compacta inteligente Modo de empleo
Caixa de pagamento compacta inteligente Manual de instruções
Smart kompakt betalningslåda Bruksanvisning
Компактный блок оплаты Smart Руководство по эксплуатации
Inteligentny kompaktowy moduł płatności Instrukcja obsługi

Table of contents


С	Control elements		
Im	nportant information	10	
	Proper use		
	For your safety		
1	Your Smart Compact Payment Box	11	
	Supplied as standard	11	
	Compatibility	11	
	Maintenance	11	
2	Installing the Smart Compact Payment Box	11	
	Connecting the transmitter (for a wireless connection)	11	
	Connecting to the machine (with cable)	12	
3	Configuring the Smart Compact Payment Box		
4	Establishing connection between transmitter and coffee machine	12	
5	Uninstalling the Smart Compact Payment Box	12	
6	Accounting mode	12	
7	LED displays		
8	Technical data	13	

Control elements




Smart Compact Payment Box

- 1 Housing
- 2 Holder for accounting system
- 3 Coin box
- 4 Front cover (lockable)

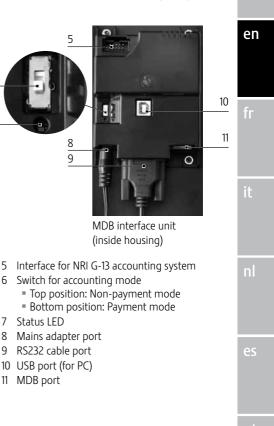

RS232 connecting cable

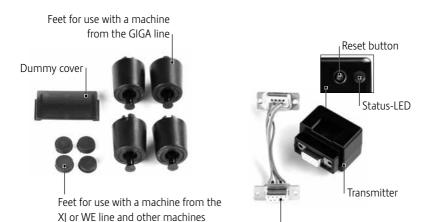

6

7

SV

ru

9

Important information

Proper use

The Smart Compact Payment Box is only intended to be used with an accounting system tested by JURA. Use for any other purpose will be deemed improper. JURA cannot accept any responsibility for the consequences of improper use.

Before using the machine read these instructions for use thoroughly and completely and comply with the instructions they contain. A warranty service is not applicable for damage or defects caused by non-compliance with the instructions for use. Keep these instructions for use close to the machine and pass them on to the next user.

For your safety

- Only operate the machine with the mains adapter provided.
- Do not allow children to play with the machine.
- Children may not clean or service the machine unless supervised by a responsible person.
- Children aged 8 and over may only operate the machine without supervision if they have been instructed in how to use it safely. Children must be able to recognise and understand the potential dangers arising from incorrect use.
- People, including children, who
 - do not have the physical, sensory or mental capabilities to use the machine safely or
 - are inexperienced or lack knowledge

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

Supplied as standard

- Housing (with built-in MDB interface)
- 2 keys
- Coin box
- Mains adapter
- Mains cable with mains plug
- RS232 cable
- USB cable
- Transmitter with RS232 connecting cable
- Dummy cover
- PC software for Smart Compact Payment Box

Compatibility

The Smart Compact Payment Box is compatible with all professional models of the W, GIGA and X lines (except IMPRESSA X30/X7/X70/X95/X90 and Xs95/Xs90 avantgarde).

Please note that not all available accounting systems are compatible with the Smart Compact Payment Box. The Smart Compact Payment Box has been tested with the following accounting systems:

- NRI G-13 Coin Validator
- Hug-Witschi DIVA2
- PBV Kaufmann Mifare Vending Reader VR1
- Microtronic Mlight5 Reader
- Microtronic Mlight3 Reader
- Microtronic Msmart5 V7
- PAYTEC/Fage Oscar/Giody
- Evis Legic Gecko
- Dallmayr Card System Ultimo
- You can always find the most up-to-date list on our website (www.jura.com).

Maintenance

Do not use harsh or abrasive cleaning agents or hard objects to clean the machine. These may damage the coating of the housing.

2 Installing the Smart Compact Payment Box

You can either connect the Smart Compact Payment Box to the coffee machine **by cable** or use the transmitter supplied as standard for a **wireless** connection.

- i To connect the Smart Compact Payment Box to the coffee machine, a functioning accounting system must be installed.
- **1** Remove the rear wall of the Smart Compact Payment Box to connect the various cables to the MDB interface unit. Screws for attaching the rear wall from the inside after connecting the cables are supplied with the unit.

Connecting the transmitter (for a wireless connection)

- Remove front cover.
- Loosen and remove the two screws on the rear cover.
- Slide up the rear cover.
- Plug RS232 connecting cable into connection on MDB interface unit.
- Connect transmitter to the other end of the connecting cable.
- Place transmitter in recess in rear cover.
- <u>Plug mains adapter into connection (8).</u>



- Insert rear cover and slide down.
- Insert and tighten the two screws on the rear cover.
- Plug Smart Compact Payment Box's mains plug into power socket.
- Switch on coffee machine.

pt

ru

Connecting to the machine (with cable)

- Switch off coffee machine at power switch.
- Move switch for accounting mode to bottom position (payment mode).
- Connect RS232 cable to coffee machine.
- i If using the intelligent fresh water kit: Connect RS232 cable to Mini Hub of intelligent fresh water kit.
 - Insert the mains plug into a power socket.
 - Switch on coffee machine.

3 Configuring the Smart Compact Payment Box

The process for configuring the Smart Compact Payment Box (e.g. machine selection) is explained below.

Precondition: The PC software of the Smart Compact Payment Box is installed and up to date.

- Switch off coffee machine at power switch.
- Remove Smart Compact Payment Box's mains plug from power socket.
- Remove RS232 cable (if connected).
- Connect Smart Compact Payment Box to PC with the USB cable.
- Plug Smart Compact Payment Box's mains plug into power socket. The Smart Compact Payment Box switches on.
- Configure Smart Compact Payment Box with the PC software.
- **i** The instructions for use for the PC software are contained in the software.
 - Remove USB cable. The Smart Compact Payment Box switches off again. The changes will be applied the next time it is switched on.
 - Reconnect RS232 cable (if cable connection is wanted).
 - Switch on coffee machine.
- i Prices can be set and changed at any time. The coffee machine and Smart Compact Payment Box do not have to be switched off.

4 Establishing connection between transmitter and coffee machine

- j JURA Smart Connect must be fitted in the coffee machine.
- **i** The distance between the Smart Compact Payment Box and coffee machine must not exceed 0.5 m.
 - Briefly press reset button of the Smart Connect (e.g. with a pen). The LED flashes.
 - Then (within 30 sec.) press the transmitter's reset button.
 The LEDs light up to indicate that a connection has been established.
- i If a connection cannot be established between Smart Connect and the transmitter, they may be too far apart (max. 0.5 m) or there may be machines in between which are affecting the signal.

5 Uninstalling the Smart Compact Payment Box

- Move switch for accounting mode to top position (non-payment mode).
- Wait approximately 5 seconds.
- Switch off coffee machine at power switch.
- Disconnect the mains plug.
- Remove RS232 cable (either on the coffee machine or on the Mini Hub of the intelligent fresh water kit).

6 Accounting mode

Switch for accounting mode:

- Top position:
 - Machine is in non-payment mode
 - Status LED flashes
- Bottom position:
 - Machine is in payment mode
 - Status LED on continuously
- i The accounting mode must not be changed while a drink is being prepared.

en

i If the connection between the Smart Compact Payment Box and the coffee machine is broken in payment mode, all products are locked. No products can be prepared.

7 LED displays

Status LED (7) (MDB interface unit):

- On: no errors; Smart Compact Payment Box functioning
- Off: error (mains plug not plugged in, unit not connected to coffee machine or faulty LED)
- Flashing (1 s on / 1 s off): no errors; non-payment mode is active
- Flashing rapidly: no errors; external accounting system connected and active; machine is in payment mode

8 Technical data

100–240 V ~, 50/60 Hz
300 mA
(€
Air humidity max. 80 %, ambient temperature 10–35 °C
approx. 2 m
approx. 1.1 m
approx. 2.5 kg
with low feet: 10.4 × 30.4 × 19.5 cm with high feet: 10.4 × 32.4 × 19.5 cm

This device complies with Industry Canada licenceexempt RSS standard(s) and part 15 of the FCC Rules. Operation is subject to the following two conditions:

 this device may not cause interference, and
this device must accept any interference, including interference that may cause undesired operation of the device. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Directives

The machine complies with the following directives:

- 2011/65/EU (RoHS)
- 2014/35/EU (Low Voltage Directive)
- 2014/30/EU (Electromagnetic Compatibility)
- = 2009/125/EC (Ecodesign Directive)
- 1999/5/EC (Radio Equipment and Telecommunications Terminal Equipment)

JURA Elektroapparate AG Kaffeeweltstrasse 10 CH-4626 Niederbuchsiten www.jura.com it

J70900/SmartCompactPaymentBox/de-pl/201512