
ABBREVIATED GUIDELINES

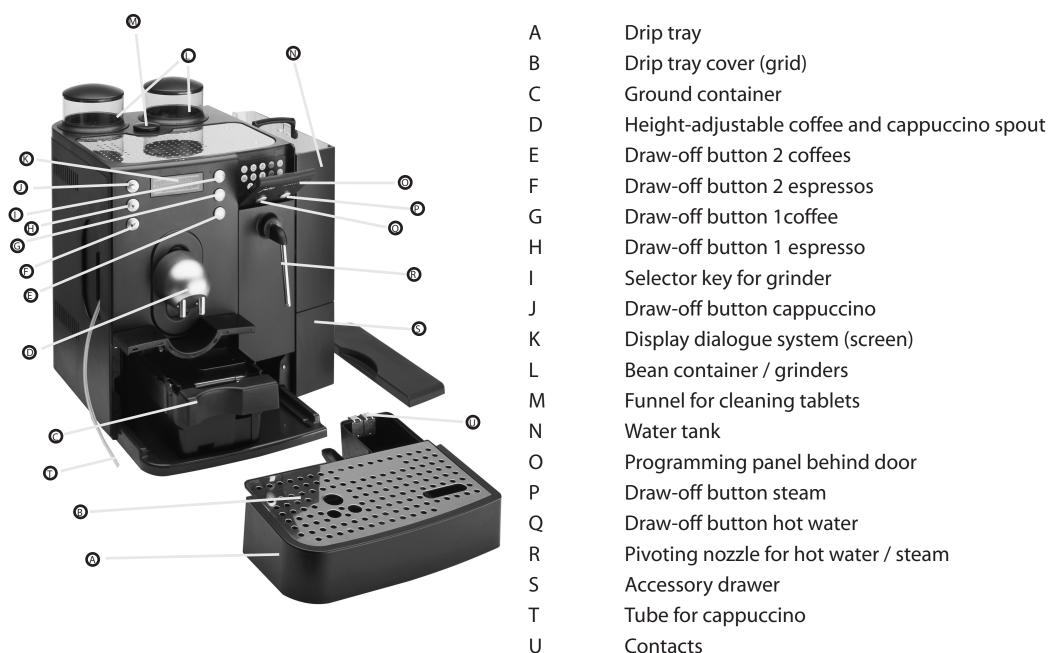





1)

Open door (O) and press this key to switch on the machine.



4

The rinsing is first donevia the cappuccino nozzle (D), after which the coffee spout (D) is cleaned.



SELECT PRODUCT

 $The rinsing \ process is \ complete.$

2

RINSE UNIT

3

Press this key.



COFFEE DRAW OFF - KEYS



Cappuccino



1 Espresso



2 Espressos



Selector key for grinder



1 Coffee



2 Coffees



ABBREVIATED GUIDELINES - COFFEE SECTOR - CLEANING

IMPRESSA X7

COFFEE

CLEANING

Lasts approx. 12

minutes

PLEASE

WAIT

(Should be done when Auto-Cappuccino is not used)

You know your machine needs cleaning when below signals appear.

CLEANING NECESSARY SELECT PRODUCT

You can still draw off coffee or steam/hotwater and start the cleaning programme later.



The programme lasts approx. 15 minutes.



Do not interrupt programme once started.



Open door (O) and press this key until you hear an acoustic signal to start the cleaning programme.





SELECT CLEANING - +

Press this key 3 times.





COFFEE CLEANING

Press this key (O).





Use JURA cleaning tablets only, which are available at your local authorized dealer.



(7)

EMPTY DRAWER

Empty the drip tray (A) and the grounds container (C).



SELECT PRODUCT

The cleaning programme is now complete.

 
4

EMPTY DRAWER

Empty the drip tray (A) and the grounds container (C).



Put a JURA cleaning tablet in the funnel (M).







Place a container under the coffee spout (D) and press this key (O).





ABBREVIATED GUIDELINES - ENTIRE-CLEANING

(Should be done when Auto-Cappuccino is used)

IMPRESSA X7

You knowyour machineneeds cleaning when below signals appear.

CLEANING NECESSARY

SELECT PRODUCT

You can still draw off coffee or hotwater and start the cleaning programme later.



The programme lasts approx. 20 minutes.



Do not interrupt the programme once

1) Opendoor(O) and press this key until you hear an acoustic signal to start the cleaning programme.



(2)

SELECT CLEANING - +

Press this key twice.



ENTIRE CLEANING

3 Press this key.



4

EMPTY DRAWER

Empty the drip tray (A) and the grounds container (C).



INSERT TABLET

Put a JURA cleaning tablet in the funnel \mathcal{V} (M).



CLEANER FOR CAPPUCCINO

Fill any jug with about 0,25 litres of tap water and add about 3 cupfuls of the Cappuccinocleaner.

Immerse the cappuccino tube (T) intoit.



Use JURA-cleaning tablets and - Cappuccino cleaner only, which are available at your local authorized dealer.



PRESS CLEANING

Place any jug under the coffee spout(D) and press this key.



8 ENTIRE CLEANING PLEASE WAIT



Lasts approx. 13 minutes.



You hear an acoustic signal. Fill tap water in any jug and immerse the Cappuccinotube(T) into it.



10 ENTIRE CLEANING PLEASE



Lasts approx. 1 minute.

WAIT



Empty the drip tray(A) and the grounds container (C).



SELECT PRODUCT

The cleaning programme is nowcomplete.



ABBREVIATED GUIDELINES - DE-SCALING

(De-scaling only required if you do not use JURA Claris filter)

IMPRESSA X7

You knowyour machineneeds de-scaling when below signals appear.

DECALCIFYING NECESSARY SELECT PRODUCT

You can still draw off steam/hot water and start the cleaning programmelater.



The programme lasts approx. 40 minutes.



Do not interrupt the programme once started.

Open door (O) and switch off machine to start the de-scaling programme.



Press this key.



EMPTY DRIP TRAY

Empty the drip tray (A) and the grounds container (C).



Place any jug under the coffee spout (D) and the pivoting nozzle (R).

4

Dissolve 3 tablets completely in 0,7 litres of water in a vessel and pour the mixture into the emptywater tank (N).

 


Use JURA-de-scaling tablets only, which are available at your local authorizeddealer.

Press this key.



6 UNIT DECALCIFYING PLEASE WAIT



7 EMPTY DRIP TRAY

You hear an acoustic signal. Empty the drip tray (A) and the groundscontainer (C). 8 FILL WATER TANK

Rinse water tank (N) and refill it with tap water.

9

(10)

Place any jug underthe coffee spout (D) and the pivoting nozzle (R).

(11)

PLEASE WAIT

Lasts approx. 4

minutes.

UNIT

DECALCIFYING



CLEAN

CONTACTS

You hear an acoustic signal. Empty the drip tray (A) and the grounds container (C).Clean contacts at the back.

PRESS DESCALING



(13)

The machine switches off automatically. The de-scaling programmeis nowcomplete.



ABBREVIATED GUIDELINES - CLEANING - AUTO-CAPPUCCINO

IMPRESSA X7

(Should be done daily when Auto-Cappuccino is used)

You can start the cleaning process whenever the below signal appears.

SELECT PRODUCT



The programme lasts approx. 5 minutes.



Do not interrupt programmeoncestarted.



Open door (O) and press this key until you hear an acoustic signal to start the cleaning programme.



(2)

SELECT CLEANING - +

Press this key.



CAPPUCCINO CLEANING

3 Press this key.



(4)

Place any jug under the coffee spout (D).



CLEANER FOR CAPPUCCINO

Fill any jug with about 0,25 litres of tap water and add about 3 cupfuls of the Cappuccinocleaner.

Immerse the cappuccino tube (T) into it.



Use JURA-cleaning tablets and -Cappuccino cleaner only, which are available at your local authorized dealer.



PRESS CLEANING

Place any jug under the coffee spout (D) and press this key (O).



7 CAPPUCCINO CLEANING
PLEASE WAIT

(10) Press this key.



9 WATER FOR CAPPUCCINO

PRESS
CLEANING

You hear an acoustic signal. Fill any jug with tap water and immerse the Cappuccinotube (T) into it. CAPPUCCINO CLEANING

PLEASE WAIT

12

SELECT PRODUCT

The cleaning programme is nowcomplete.